 

 



 



 

 

 





 

 

 



 

 

 

 



 
 




Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [TV]	 TV/Radio /
 Internet	 Smart / List
 ↔	 Fav / Marker / PC
 Mute	 Mute / Dimmer
 Vol+	 Vol+

Originale	Sostituto
 Vol-	 Vol-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 OK	 OK
 Menu	 Menu / Home
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Q.Menu	 D.Menu / Top
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 i	 Info / Angle
 EPG	 Guide / EPG / -/-
 TXT	 Text / Goto
 Lang.	 Audio / Lang I/II
 Subt.	 Subtitle / EQ





Originale	Sostituto	Originale	Sostituto
 Red	 Red / Netflix / Search		
 [>]	 Picture / Format		
 [ + ]	 Zoom / Size		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 *1/O	 Shift + 1		
 *2/Q	 Shift + 2		
 Blue	 Blue / Prime Video / Random		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 <<	 << / Tune-		
 Stop	 Stop / Hold		

