 

 

 

 





 

 



 

 

 

 

 

 

 




 


 

 



 



 

 





 

 

 

 
 
 

 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol-	 Vol-
 Source	 AV / Input / RDS	 P+	 CH+ / Page+
 1	 1	 P-	 CH- / Page-
 2	 2	 OK	 OK
 3	 3	 Menu	 Menu / Home
 4	 4	 Back	 Back / Return
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Q.Menu	 D.Menu / Top
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 [TV]	 TV/Radio /	 i	 Info / Angle
 Internet	 Smart / List	 EPG	 Guide / EPG / -/-
 ↔	 Fav / Marker / PC	 TXT	 Text / Goto
 Mute	 Mute / Dimmer	 Lang.	 Audio / Lang I/II
 Vol+	 Vol+	 Subt.	 Subtitle / EQ



