 

 



 



 

 

 





 

 

 



 

 

 

 

 
 


 







 


 

 







Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [TV]	 TV/Radio /
 Internet	 Smart / List
 ↔	 Fav / Marker / PC
 Mute	 Mute / Dimmer
 Vol+	 Vol+

Originale	Sostituto
 Vol-	 Vol-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 OK	 OK
 Menu	 Menu / Home
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Q.Menu	 D.Menu / Top
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 i	 Info / Angle
 EPG	 Guide / EPG / -/-
 TXT	 Text / Goto
 Lang.	 Audio / Lang I/II
 Subt.	 Subtitle / EQ





Originale		Sostituto		Originale		Sostituto	
	Red		Red / Netflix / Search				
	[>]		Picture / Format				
	[+]		Zoom / Size				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	*1/O		Shift + 1				
	*2/Q		Shift + 2				
	Blue		Blue / Prime Video / Random				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	<<		<< / Tune-				
	Stop		Stop / Hold				

