










 



 















 


 
 







 



 
 
 

 

 






 






 



















 









Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 1	 1	 OK	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Sleep	 Sleep
 9	 9	 Aspect	 Format
 0	 0	 Rec	 Rec
 Recall	 Pre Ch	 Red/DVD-Setup	 Red
 PR.List	 List	 Green/Repeat	 Green
 Source	 AV	 Yellow/Languag	 Yellow
 CH+	 Ch +	 Blue/DVD-Menu	 Blue
 CH-	 Ch -	 Title/PC Auto	 Options

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 1	 1	 OK	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Sleep	 Sleep
 9	 9	 Aspect	 Format
 0	 0	 Rec	 Rec
 Recall	 Pre Ch	 Red/DVD-Setup	 Red
 PR.List	 List	 Green/Repeat	 Green
 Source	 AV	 Yellow/Languag	 Yellow
 CH+	 Ch +	 Blue/DVD-Menu	 Blue
 CH-	 Ch -	 Title/PC Auto	 Options





Originale	Sostituto
Zoom/Tv/Radio	TV/R
I/II/Audio	Dual
Subtitle	Subt
Info/Display	Info
Step/Freeze	Back
Prog/Index	Media
A-B/Reveal	D. Menu
Text/Eject	Text
Play/Size	Play
Pause/Subpage	Pause
Stop/Hold	Stop
I<<<	I<<<
>>I	>>I
<<<	<<<
>>>	>>>
S.Mode	SHIFT + DUAL Shift + Dual
Pic.Mode	SHIFT + PICTURE FORMAT Shift + Format

Originale	Sostituto
Rec List	SHIFT + SUBT Shift + Subt

