



 




 



 
 
 


 


 
 
 


 
 

 



 

 

 

 

 

 

 


 
 

 


 
 

 


 


 


 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol -
	Source		AV		P+		Ch +
	1		1		P-		Ch -
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		OK		Ok
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	TV		TV/R		i/Info		Info
	Recall		Pre Ch		Music/Photo/Phot		Options
	Mute		Mute		Guide		Guide
	Internet		Smart		[≡]/Text		Text
	Vol+		Vol +		*/O		Format





Originale		Sostituto		Originale		Sostituto	
	* / Q		3D				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Lang		Dual				
	[≡]..		Subt				
	Rec		Rec				
	[-o-]		Eject				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	<<		<<				
	>>		>>				

