

 




























 






 





















 





















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PR.List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Pic.Mode	 Picture / Format
 S.Mode	 Sound / Title

Originale	Sostituto
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 Rec	 Rec / Rec Mode
 Rec List	 Shift + Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Originale	Sostituto
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 PC Auto	 Eject / Surround
 Tv/Radio	 TV/Radio /
 I/II/Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Index	 Display / Media
 Reveal	 Shift + Back / Return
 Freeze	 Shift + Pause / Step /
 Info	 Info / Angle
 Text	 Text / Goto
 Play/Size	 Play / Slow
 Pause/Subpage	 Pause / Step / Freeze
 Stop/Hold	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-

Originale	Sostituto
 >>	 >> / Tune+

