



Originale		Sostituto		Originale		Sostituto	
	Power		Power		4		4
	OK		Ok		5		5
	Up		Up		6		6
	Down		Down		7		7
	Right		Right		8		8
	Left		Left		9		9
	Menu		Menu		0		0
	Mute		Mute		P<P		Pre Ch
	> <		Smart		[i+]		Info
	[≡]		Text		[1 2]		Options
	P+		Ch +		[-O]/Active Control		Media
	P-		Ch -		[<>]		Format
	Vol+		Vol +		Source		AV
	Vol-		Vol -		(O)		TV/R
	1		1		Red		Red
	2		2		Green/Timer		Green
	3		3		Yellow/[]		Yellow






















 



 









 

 

 

 
 
 

 
 

 

 
 
 
 
 
 
 




 







 


Originale	Sostituto
Blue/[...]	Blue
Rec	Rec
<<	<<
Stop	Stop
Play	Play
>>	>>
[[I]]	Guide
Power AMP	Shift + Power
[=] AMP	Shift + Text
[[I]] AMP	Shift + Guide
OK AMP	Shift + Ok
Up AMP	Shift + Up
Down AMP	Shift + Down
Right AMP	Shift + Right
Left AMP	Shift + Left
Menu AMP	Shift + Menu
P+ AMP	Shift + Ch +

Originale	Sostituto
P- AMP	Shift + Ch -
Mute AMP	Shift + Mute
Vol+ AMP	Shift + Vol +
Vol- AMP	Shift + Vol -
1 AMP	Shift + 1
2 AMP	Shift + 2
3 AMP	Shift + 3
4 AMP	Shift + 4
5 AMP	Shift + 5
6 AMP	Shift + 6
7 AMP	Shift + 7
8 AMP	Shift + 8
9 AMP	Shift + 9
0 AMP	Shift + 0
P<P AMP	Shift + Pre Ch
>> AMP	Shift + >>
<< AMP	Shift + <<




 





 


 
 


 
 


 
 

 
 


 

 

 
 
 

 


 

 
 


 

 

 
 


 


 

 

 


 




 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		P-		Ch -
	Source		AV		Vol+		Vol +
	>>		>>		Vol-		Vol -
	<<		<<		1		1
	Stop		Stop		2		2
	Play		Play		3		3
	[[[]]]		Guide		4		4
	[[]]		Text		5		5
	OK		Ok		6		6
	Up		Up		7		7
	Down		Down		8		8
	Right		Right		9		9
	Left		Left		0		0
	> <		Smart		[i+]		Info
	Menu		Menu		P<P		Pre Ch
	Mute		Mute		[12]		Options
	P+		Ch +		[-O]/Active Control		Media


 




 

 




 





 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Mute		Mute
	Source		AV		P+		Ch +
	(O		TV/R		P-		Ch -
	Red		Red		Vol+		Vol +
	Green/Timer		Green		Vol-		Vol -
	Yellow/[]		Yellow		> <		Smart
	Blue/[...]		Blue		Menu		Menu
	>>		>>		1		1
	Rec		Rec		2		2
	<<		<<		3		3
	Stop		Stop		4		4
	Play		Play		5		5
	OK		Ok		6		6
	Up		Up		7		7
	Down		Down		8		8
	Right		Right		9		9
	Left		Left		0		0





 
 


 


 








 
 






 







 




 










 







Originale		Sostituto		Originale		Sostituto	
	[i+]		Info		> < VCR		Shift + Smart
	P<P		Pre Ch		Menu VCR		Shift + Menu
	[1 2]		Options		P+ VCR		Shift + Ch +
	[-O-]/Active Control		Media		P- VCR		Shift + Ch -
	[<>]		Format		1 VCR		Shift + 1
	Power VCR		Shift + Power		2 VCR		Shift + 2
	Source VCR		Shift + AV		3 VCR		Shift + 3
	Rec VCR		3D		4 VCR		Shift + 4
	>> VCR		Shift + >>		5 VCR		Shift + 5
	<< VCR		Shift + <<		6 VCR		Shift + 6
	Stop VCR		Shift + Stop		7 VCR		Shift + 7
	Play VCR		Shift + Play		8 VCR		Shift + 8
	OK VCR		Shift + Ok		9 VCR		Shift + 9
	Up VCR		Shift + Up		0 VCR		Shift + 0
	Down VCR		Shift + Down		[i+] VCR		Shift + Info
	Right VCR		Shift + Right		P<P VCR		Shift + Pre Ch
	Left VCR		Shift + Left				





Originale		Sostituto		Originale		Sostituto	
	Power		Power		2		2
	>>		>>		3		3
	<<		<<		4		4
	Stop		Stop		5		5
	Play		Play		6		6
	[[I]]		Guide		7		7
	Up		Up		8		8
	Down		Down		9		9
	Right		Right		0		0
	Left		Left		[i+]		Info
	> <		Smart		P<P		Pre Ch
	Mute		Mute				
	Vol+		Vol +				
	Vol-		Vol -				
	P+		Ch +				
	P-		Ch -				
	1		1				

