



 
 


 
 






 


 




 
 





 


 



 
 












 
 


 



 
 

 

 
 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Pause		Pause
	Open/close		Eject		<<		<<
	Time Shift		Sleep		>>		>>
	1		1		Pr+		Ch +
	2		2		Pr-		Ch -
	3		3		Rec		Rec
	4		4		Guide		Guide
	5		5		Pr List		TV/R
	6		6		Timer Rec		Shift + Options
	7		7		Info/Display		List
	8		8		Enter		Ok
	9		9		Up		Up
	0		0		Down		Down
	Clear		Exit		Left		Left
	Repeat		Shift + Text		Right		Right
	Play		Play		Return		Back
	Stop		Stop		Title/Popup		Options





Originale		Sostituto	
	Disc Menu		D. Menu
	Home		Smart
	Red/A/FAV		Red
	Green/B/Page-		Green
	Yellow/C/Page+		Yellow
	Blue/D/Edit		Blue
	I<<		I<<
	>>I		>>I
	Marker		Menu
	Search	+	Shift + TV/R
	Zoom	+	Shift + Eject
	Text		Text
	Audio		Dual
	Subtitle		Subt
	PowerTv	+	Shift + Power
	AV/Input Tv		Media
	Vol+ Tv		Vol +

Originale		Sostituto	
	Vol- Tv		Vol -
	Pr+ Tv	+	Shift + Up
	Pr- Tv	+	Shift + Ch +

