



Originale	Sostituto	Originale	Sostituto
Power	Power	Menu	Menu / Home
Eject	Eject / Surround	Home	Shift + Menu /
1	1	Back	Back / Return
2	2	Up	Up
3	3	Left	Left
4	4	OK	OK
5	5	Right	Right
6	6	Down	Down
7	7	Stop	Stop / Hold
8	8	Play/Pause	Play / Slow
9	9	Info	Info / Angle
X/Shuffle	AV / Input / RDS	<<<	<<< / Tune-
0	0	>>>	>>> / Tune+
Repeat	Shift + Green / APP /	I<<<	I<<< / Preset-
Vol-	Vol-	>>I	>>I / Preset+
Mute	Mute / Dimmer	Red	Red / Netflix / Search
Vol+	Vol+	Green	Green / APP / Repeat

Originale	Sostituto	Originale	Sostituto
Menu	Menu / Home	Menu	Menu / Home
Home	Shift + Menu /	Home	Menu / Home
Back	Back / Return	Home	Menu / Home
Up	Up	Home	Menu / Home
Left	Left	Home	Menu / Home
OK	OK	Home	Menu / Home
Right	Right	Home	Menu / Home
Down	Down	Home	Menu / Home
Stop	Stop / Hold	Home	Menu / Home
Play/Pause	Play / Slow	Home	Menu / Home
Info	Info / Angle	Home	Menu / Home
<<<	<<< / Tune-	Home	Menu / Home
>>>	>>> / Tune+	Home	Menu / Home
I<<<	I<<< / Preset-	Home	Menu / Home
>>I	>>I / Preset+	Home	Menu / Home
Red	Red / Netflix / Search	Home	Menu / Home
Green	Green / APP / Repeat	Home	Menu / Home





Originale	Sostituto
 EPG	 Guide / EPG / -/--
 TXT	 Text / Goto
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Setup	 Setup / OPT /
 Tv Sys.	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subt.	 Subtitle / EQ
 → /Goto	 Shift + Right
 >/Slow	 Shift + Play /
 Angle	 Shift + Info / Angle
 Zoom	 Zoom / Size
 Rec	 Rec / Rec Mode
 Edit	 D.Menu / Top
 Copy	 Picture / Format
 Timeshift	 Sleep / Timer

Originale	Sostituto

