 

 
 

 
 
 


 

 

 

 
 



 
 




 









 
 






 

 
 


Originale	Sostituto
 Power	 Power
 Source	 AV
 Top Menu	 Menu
 Disc Menu	 D. Menu
 Smart TV	 TV/R
 Bluetooth	 Guide
 Home	 Smart
 [=]	 Text
 OK	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Originale	Sostituto
 Open/Close	 Eject
 Return	 Back
 III	 Options
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 <<	 <<
 >>	 >>
 <	 <<
 >	 >>
 Vol+	 Vol +
 Vol	 Vol -
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4





Originale		Sostituto	
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Audio		Dual

Originale		Sostituto	

