 



 



 





 



 









 











 
 




















 









Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	Setup		Setup / OPT /		Movie		Display / Media
	DTV		D.Menu / Top		Music		Smart / List
	1		1		Photo		Picture / Format
	2		2		Vol-		Vol-
	3		3		Vol+		Vol+
	HDMI/AV		AV / Input / RDS		Up		Up
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	Disc		Shift + 3		Exit		Exit / Cancel / Clear
	7		7		Down		Down
	8		8		Home		Menu / Home
	9		9		Edit		Back / Return
	Rec		Rec / Rec Mode		Copy		Shift + Smart / List
	EPG		Guide / EPG / -/--		Repeat		Green / APP / Repeat
	TTX		Text / Goto		<<		<< / Tune-





Originale	Sostituto
Play/Pause	Play / Slow
I<<	I<< / Preset-
>>	>> / Tune+
Stop	Stop / Hold
>>I	>>I / Preset+
Audio	Audio / Lang I/II
Sub-T	Subtitle / EQ
FAV	Fav / Marker / PC
Info	Info / Angle
Mute	Mute / Dimmer
DVD	Shift + 2
Timer	Sleep / Timer
T/R	Zoom / Size

Originale	Sostituto

