




 


 






Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Pause	 Pause / Step / Freeze
 Open/Close	 Eject / Surround	 >>	 >>  / Preset+
 Standby Tv	 Shift + Power	 <<	 << / Tune-
 1	 1	 Stop	 Stop / Hold
 2	 2	 Play	 Play / Slow
 3	 3	 >>	 >> / Tune+
 4	 4	 Tv Vol+	 Vol+
 5	 5	 Tv Mute	 Mute / Dimmer
 6	 6	 Tv Prog+	 CH+ / Page+
 7	 7	 Tv Vol-	 Vol-
 8	 8	 Tv Prog-	 CH- / Page-
 9	 9	 Menu	 Menu / Home
 Cancel	 Shift + Exit / Cancel / Clear	 Return	 Back / Return
 0	 0	 Up	 Up
 Tv Input Sel.	 AV / Input / RDS	 Left	 Left
 I<<	 I<< / Preset-	 OK	 OK
 Slow	 Shift + Play / Slow	 Right	 Right

Slow



