





 





















 

 

 





Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 Teletext	 Text / Goto
 [112]	 Zoom / Size
 Subtitle	 Subtitle / EQ
 [<>]	 Picture / Format
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/--
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 Back	 Back / Return
 OK	 OK
Right	Right

Originale	Sostituto
 Menu/Browse	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Option	 Setup / OPT /
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
8	8





Originale		Sostituto		Originale		Sostituto	
	9		9				
	MHEG/Cancel	+	Shift + Exit / Cancel / Clear				
	0		0				
	P=P		Fav / Marker / PC				
	Ambilight		Display / Media				
	Mode		Smart / List				

