 

 

 
 
 
 
 
 
 
 
 
 
 

 

 

 
 
 
 


 



 
 
 





Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Tv System	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Goto	 Shift + Guide
 Guide	 Guide
 Setup	 Sleep
 Return	 Shift + Back

Originale	Sostituto
 I<< Prev	 I<<
 Next >>I	 >>I
 Vol+	 Vol +
 Vol-	 Vol -
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Stop	 Stop
 Pause/Step	 Pause
 Repeat	 Text
 Option	 Options
 Info	 Info
 Audio	 Dual
 Zoom	 Eject
 Subtitle	 Subt





Originale		Sostituto		Originale		Sostituto	
	Slow		Back				
	Copy		Pre Ch				
	Select		D. Menu				
	Confirm		List				
	Red/All		Red				
	Blue/Music		Blue				
	Green/Photo		Green				
	Yellow/Movies		Yellow				
	>>/FF		>>				
	<</FR		<<				

