 




 











 



 


 
















 





 


 



 
 


 








 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		P-		Ch -
	1		1		[≡..]/Source		AV
	2		2		Menu		Menu
	3		3		[≡]/[/≡]/TTX/MIX		Text
	4		4		[≡?]/Info		Info
	5		5		Exit		Exit
	6		6		Enter		Ok
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	[≡+]/-/-		Guide		Red/Dual		Red
	PRE-CH		Pre Ch		Green/Sound		Green
	Mute		Mute		Yellow/P.Size		Yellow
	Vol+		Vol +		Blue/P.Mode		Blue
	Vol-		Vol -		[≡◇]/Auto Prog		Options
	P+		Ch +		[≡o]/ADD/DEL		Subt





Originale		Sostituto		Originale		Sostituto	
	[≡◆]/Sleep		Format				
	[≡x]/PIP		3D				
	[▼]/Still		TV/R				
	TV		Smart				
	PC		Media				

