 

 














 


 

 








 
 

 
















Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Audio	 Dual
 Sub-T	 Subt
 Info	 Info
 Tv/Radio	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PgUp	 Ch +

Originale	Sostituto
 PgDn	 Ch -
 Menu	 Menu
 Exit	 Exit
 Play	 Play
 Pause/Timeshift	 Pause
 <<	 <<
 >>	 >>
 <<	 <<
 >>	 >>
 OK	 Ok
 Up/CH+	 Up
 Down/CH-	 Down
 Vol+	 Vol +
 Right	 Right
 Left	 Left
 Vol-	 Vol -
 Goto	 Back



