

 
 
 
 
 

 
 




 

 
 
 

 
 

 

 
 
 
 
 


Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Function	 Menu
 Band	 TV/R
 Intro	 Ok
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 I<</HR./Tun Dn	 I<<
 Tun	 >>I
 Vol+	 Vol +
 Vol-	 Vol -
 EQ Mode	 Dual
 Find/Mo/St	 Options
 Mem/Dir-Up	 Up
 Mem/Dir-Dn	 Down
 Sleep	 Sleep

Originale	Sostituto
 Timer	 AV
 BBS	 Subt
 Mem./CLK-ADJ	 Back
 Repeat	 Text
 Ran	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +0/+00	 0

