



















 







| Originale | Sostituto |
|---|---|
|  |  Power |
|  |  Mute / Dimmer |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |
|  |  Internet / Smart / List |
|  |  Source / AV / Input / RDS |
|  |  Lang / Audio / Lang I/II |
|  |  Tv/Radio / TV/Radio / |
|  |  Subtitle / EQ |
|  |  LIB / Picture / Format |
|  |  Rec / Rec Mode |
|  |  Stop / Hold |
|  |  << / Tune- |
|  |  Play / Slow |
|  |  Pause / Step / Freeze |

| Originale | Sostituto |
|---|---|
|  |  >> / Tune+ |
|  |  Menu / Home |
|  |  Up |
|  |  Back / Return |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Info / Angle |
|  |  Down |
|  |  Exit / Cancel / Clear |
|  |  Vol+ |
|  |  Display / Media |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  Fav / Marker / PC |
|  |  CH- / Page- |
|  |  1 |



