













 





 







Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Internet	 Smart / List
 Source	 AV / Input / RDS
 Lang	 Audio / Lang I/II
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 LIB	 Picture / Format
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Originale	Sostituto
 >>	 >> / Tune+
 Menu	 Menu / Home
 Up	 Up
 Back	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 i	 Info / Angle
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 P::P	 Display / Media
 PR+	 CH+ / Page+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 PR-	 CH- / Page-
 1	 1





Originale	Sostituto
2 _{abc}	DVD 2
3 _{def}	CD - STB 3
4 _{ghi}	VIDEO 4
5 _{jkl}	TAPE 5
6 _{mno}	TUNER 6
7 _{pqrs}	AUX - HDD 7
8 _{tuv}	USB 8
9 _{wxyz}	BLUETOOTH 9
TEXT	GOTO TEXT
0_	HDMI - SAT 0
GUIDE	-/-- GUIDE EPG

Originale	Sostituto

