
 


 


 
 
 
 

 

 
 



 
 
 

 
 
 
 
 
 
 
 
 
 




Originale	Sostituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	TTX/MIX
	PRE-CH
	Mute
	CH.List
	Vol +

Originale	Sostituto
	Vol -
	Ch +
	Ch -
	Menu
	Options
	Guide
	Info
	Exit
	Back
	Media
	Ok
	Up
	Down
	Right
	Left
	Red
	Green



