


 





 




 
 

 

 

 

 
 


 

 
 
 



 

 




Originale	Sostituto
 Power	 Power
 Menu	 Menu
 Q.Menu	 D. Menu
 Exit	 Exit
 Back	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 PR +	 Ch +
 PR-	 Ch -
 i	 Info
 Guide/Tv+Book	 Shift + Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 TV	 TV/R
 [≡]/Text	 Text





Originale	Sostituto	Originale	Sostituto
*/o..	Eject		
Source/Game	AV		
*/o	List		
World	Guide		
Music/Movie/Phot	Options		
[-O-]	Sleep		
[≡]..	Subt		
Lang	Dual		
Rec	Rec		
Stop	Stop		
Pause	Pause		
Play	Play		
>>	>>		
<<	<<		

