



Originale	Sostituto
 Power	 Power
 Eject	 Eject / Surround
 Subtitle	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 Angle	 Info / Angle
 4	 4
 5	 5
 6	 6
 Audio	 Audio / Lang I/II
 7	 7
 8	 8
 9	 9
 Osd	 Display / Media
 Time	 Sleep / Timer
 10+	 Guide / EPG / -/--

Originale	Sostituto
 0	 0
 PS/IS	 Smart / List
 Title	 Sound / Title
 Prog	 TV/Radio /
 Clear	 Exit / Cancel / Clear
 Setup	 Setup / OPT /
 Up	 Up
 Left	 Left
 Ok	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Menu	 Menu / Home
 Pbc	 Picture / Format
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow





Originale	Sostituto
>>I	>>I / Preset+
>>	>> / Tune+
Stop	Stop / Hold
I<<	I<< / Preset-
Zoom	Zoom / Size
Step	Shift + Pause / Step /
Slow	Shift + Play /
Vol+	Vol+
Mute	Mute / Dimmer
3D	Shift + 3
Ran	D.Menu / Top
Vol-	Vol-
N/P	Red / Netflix / Search
R/L	Blue / Prime Video / Random
A/B	Yellow / YouTube / Repeat
Repeat	Green / APP / Repeat

Originale	Sostituto

