





 
 

 

 











Originale	Sostituto	Originale	Sostituto
 Power	 Power	 CH-	 CH- / Page-
 DTV/VCR	 AV / Input / RDS	 Down	 Down
 Mute	 Mute / Dimmer	 Favorite	 Fav / Marker / PC
 Info	 Info / Angle	 1	 1
 Play	 Play / Slow	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 Menu	 Menu / Home	 Game	 Display / Media
 EPG	 Guide / EPG / -/--	 4	 4
 Exit	 Exit / Cancel / Clear	 5	 5
 Up	 Up	 6	 6
 CH+	 CH+ / Page+	 Recall	 Back / Return
 Left	 Left	 7	 7
 Vol-	 Vol-	 8	 8
 OK	 OK	 9	 9
 Right	 Right	 0	 0
 Vol+	 Vol+	 Tv/Radio	 TV/Radio /
 Rec List	 Smart / List	 Audio	 Audio / Lang I/II





Originale	Sostituto
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Record	 Rec / Rec Mode
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+

Originale	Sostituto

