







 

 

 







 





 



 



 



 













 




 
 







 




 


 













Originale		Sostituto		Originale		Sostituto	
	Power		Power		Swap		Back / Return
	Mute		Mute / Dimmer		Vol+		Vol+
	Hold		Stop / Hold		PP		Smart / List
	♪		Sound / Title		PR+		CH+ / Page+
	Sub		Subtitle / EQ		Vol-		Vol-
	16:9		Picture / Format		PR-		CH- / Page-
	TV/TX		TV/Radio /		1		1
	Double		D.Menu / Top		2		2
	[]		Setup / OPT /		3		3
	Mix		Text / Goto		4		4
	AV		AV / Input / RDS		5		5
	Menu		Menu / Home		6		6
	Up		Up		7		7
	Left		Left		8		8
	OK		OK		9		9
	Right		Right		-/-		Guide / EPG / -/-
	Down		Down		0		0





	Originale	Sostituto	
	Violet	 Fav / Marker / PC	
	Red	 Red / Netflix / Search	
	Green	 Green / APP / Repeat	
	Yellow/Timer	 Yellow / YouTube / Repeat	
	Blue	 Blue / Prime Video / Random	
	Update	 Shift + OK	
	Reveal	 Shift + Back / Return	
	P100	 Shift + 0	

Originale	Sostituto

