 













 



 



 



















 





 

 











 

 

 







 

 

 

 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		4		4
	Red / ↑		Red / Netflix / Search		5		5
	green / ↓		Green / APP / Repeat		6		6
	Yellow		Yellow / YouTube / Repeat		7		7
	Blue		Blue / Prime Video / Random		8		8
	Exit		Exit / Cancel / Clear		9		9
	[≡o]		Sleep / Timer		P<P/Swap		Picture / Format
	[≡+]		Stop / Hold		0		0
	[≡x]		Smart / List		-/--		Shift + Guide / EPG / -/--
	[≡]		Text / Goto		Vol-		Vol-
	[/≡]		Setup / OPT /		Vol+		Vol+
	[≡♦]/[+]/Wide		Menu / Home		Mute		Mute / Dimmer
	[≡?]		Shift + Info / Angle		P-		CH- / Page-
	[≡i]/Guide		Guide / EPG / -/--		P+		CH+ / Page+
	1		1		[i]/Info		Info / Angle
	2		2		Tv/DTV		TV/Radio /
	3		3		[AV]/Source		AV / Input / RDS





Originale	Sostituto	Originale	Sostituto
	I-II		Audio / Lang I/II
	PP		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	M		D.Menu / Top
	Down		Down

Originale	Sostituto

