 

 

 
 
 
 
 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 


 



 





Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV Input	 AV
 >>	 >>
 <<	 <<
 I<<	 I<<
 >>I	 >>I

Originale	Sostituto
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 Info/Menu	 Info
 Home	 Smart
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Back	 Back
 Disc Menu	 D. Menu
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Repeat	 Text





Originale		Sostituto		Originale		Sostituto	
	O)))/Audio		Dual				
	[...]/Subtitle		Subt				
	Title/Pop-Up		TV/R				
	Power TV	+	Shift + Power				
	PR+ Tv		Ch +				
	PR- Tv		Ch -				
	Vol+ Tv		Vol +				
	Vol- Tv		Vol -				
	Clear		Exit				

