 

 
 



 
 














 
 
 



 


 


 
 


 
 
 
 
 



 



 


 

 





 

 
 
 
 
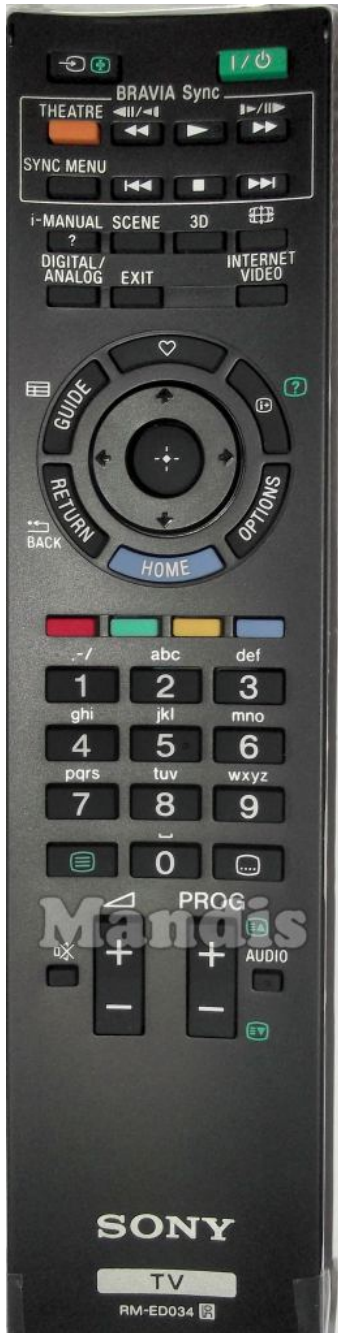 


Originale		Sostituto		Originale		Sostituto	
	Standby		Power		0		0
	Source		AV		[...]		Subt
	Prog+		Ch +		[≡]/Text		Text
	Prog-		Ch -		OK		Ok
	Vol+		Vol +		Up		Up
	Vol-		Vol -		Down		Down
	Mute		Mute		Right		Right
	Audio		Dual		Left		Left
	1		1		Return/Back		Back
	2		2		Options		Options
	3		3		♥/FAV		Pre Ch
	4		4		Guide		Guide
	5		5		[i+]/[?]		Info
	6		6		Home		Smart
	7		7		Red		Red
	8		8		Green		Green
	9		9		Yellow		Yellow





Originale		Sostituto	
	Blue		Blue
	Exit		Exit
	Internet/Video		Media
	Digital/Analog		TV/R
	3D		3D
	[+]		Format
	Scene		Shift + Pre Ch
	?/i-Manual		List
	Sync Menu		Menu
	Play		Play
	Theatre		Sleep
	Stop		Stop
	I<<		I<<
	>>I		>>I
	<</<II/<I		<<
	>>/II/>I		>>

Originale		Sostituto	

