



Originale	Sostituto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Tv/DVD	SEARCH TV/R
INPUT SEL	TIMER AV
SUBTITLE	AD SUBT
Tv Vol+	+ VOL
Tv Vol-	VOL -
Tv Mute/Audio	MUTE
OK	OK

Originale	Sostituto
▲	Up
▼	Down
▶	Right
◀	Left
OPEN/CLOSE	ZOOM Eject
MENU	TOP MENU Menu
RETURN	RETURN Back
TITLE LIST DISC MENU	SETTINGS OPT Options
EXIT	CLEAR EXIT Exit
PLAY LIST TITLE MENU	SOUND DUAL Dual
TIMER	PROG SLEEP Sleep
MARKER	SHIFT + SETTINGS OPT Shift + Options
COPY	FAV PRE-CH Pre Ch
REC MODE	SHIFT + REC MODE Shift + Rec
REC PAUSE TIME SHIFT	PICTURE FORMAT Format
STANDBY/ON	Power
TV STANDBY/ON	SHIFT + Power



 



 



 

 











 
 

 




 
 
 



 
 
Originale	Sostituto	Originale	Sostituto
 Pause	 Pause		
 Stop	 Stop		
 Play	 Play		
 >>	 >>		
 <<	 <<		
 Rec	 Rec		
 Info	 Info		
 Red/A	 Red		
 Green/B	 Green		
 Yellow/C	 Yellow		
 Blue/D	 Blue		
 >>	 >>		
 <<	 <<		
 Tv Prog+	 Shift + Up		
 Tv Prog-	 Ch +		

Originale	Sostituto	Originale	Sostituto








Originale	Sostituto
 Standby/on	 Power
 Tv Standby/on	 Shift + Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input Sel	 AV
 Tv/DVD	 TV/R
 Subtitle	 Subt
 Pause	 Pause

Originale	Sostituto
 Play	 Play
 Stop	 Stop
 >>	 >>
 <<	 <<
 >>	 >>
 <<	 <<
 Tv Mute/Audio	 Mute
 Tv Vol+	 Vol +
 Tv Vol-	 Vol -
 Prog Up	 Shift + Up
 Prog Down	 Ch +
 Red/A	 Red
 Green/B	 Green
 Yellow/C	 Yellow
 Blue/D	 Blue
 Rec	 Rec
 Menu	 Menu





Originale		Sostituto	
	Return		Back
	Exit		Exit
	Info		Info
	Title List/ Disc Menu		Options
	Play List/Title Menu		Dual
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Timer/Repeat		Sleep
	Marker		Shift + Options
	Copy		Pre Ch
	Rec Mode		Shift + Rec
	Pause/Rec Pause/Timeshift		Format
	DVD		Shift + 1
	HDD		Shift + 2

Originale		Sostituto	
	USB		Shift + 3

