

 





 

 
 


 





 



 





 





 



 





 

 

















 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Left		Left
	1		1		OK		OK
	2		2		Right		Right
	3		3		Edit		Text / Goto
	4		4		CH-		CH- / Page-
	5		5		Down		Down
	6		6		Select		Display / Media
	7		7		Stop		Stop / Hold
	8		8		Play		Play / Slow
	9		9		Rec		Rec / Rec Mode
	Source/Rec		AV / Input / RDS		I<<		I<< / Preset-
	0		0		Pause		Pause / Step / Freeze
	Timer		Sleep / Timer		Top Menu		D.Menu / Top
	Menu Disc		Setup / OPT /		>>I		>>I / Preset+
	Up		Up		Audio		Audio / Lang I/II
	CH+		CH+ / Page+		T/C		Picture / Format
	Menu System		Menu / Home		Return		Back / Return



