

 
 


 
 


 

 

 
 
 

 

 
 
 



 

 

 

 
 
 


 
 


 

 
 
 
 
 
 

 

 

 

 

 

 

 
 
 
 
 

 

 





Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Timer		-/- / EPG
	Teletex		TEXT		Menu		MENU
	Red		Red (A)		Mute		MUTE
	Green/[ ] Smart		Green (B)		P<P		P/C / FAV
	Yellow/Smart		Yellow (C)		OK		OK
	Blue		Blue (D)		Up		UP
	1		1		Down		DOWN
	2		2		Right		RIGHT
	3		3		Left		LEFT
	4		4		P+		CH +
	5		5		P-		CH -
	6		6		Vol+		VOL +
	7		7		Vol-		VOL -
	8		8		Play		Play
	9		9		Stop		Stop
	0		0		Record/OTR		Rec
	Clear		EXIT		<<		Rewind





	Originale	Sostituto	Originale	Sostituto
	>>	 Fast Forward		
	> /Index	 Last		
	> </Still	 Pause		

