 

 

 

 







 

 





















Originale	Sostituto
	 Power
	 Shift + 3
	 Shift + 2
	 Shift + 6
	 Shift + 1
	 Shift + 4
	 Display / Media
	 Pause / Step / Freeze
	 Eject / Surround
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 I<< / Preset-
	 Stop / Hold
	 >>I / Preset+
	 D.Menu / Top
	 Shift + >> / Tune+







 



 
 







 

 




 

 





Tune+

Originale	Sostituto
	 Up
	 Back / Return
	 Left
	 OK
	 Right
	 Mute / Dimmer
	 Shift + << /
	 Down
	 Sound / Title
	 Vol+
	 Vol-
	 Shift + CH+ /
	 Shift + Power
	 Shift + Vol+
	 Shift + CH- /
	 Shift + AV / Input / RDS
	 Shift + Vol-








Originale	Sostituto
 Auto	 Smart / List
 Bass Mode	 Shift + Subtitle / EQ
 Dialogue	 Shift + Audio / Lang I/II
 Surround	 Shift + Eject / Surround
 Virtual SB	 AV / Input / RDS
 Advanced	 Picture / Format
 Program	 TV/Radio /
 Audio	 Audio / Lang I/II
 Repeat	 Green / APP / Repeat
 Subtitle	 Subtitle / EQ
 Random	 Blue / Prime Video / Random
 Angle	 Info / Angle
 1	 1
 Zoom	 Zoom / Size
 2	 2
 Top Menu	 Shift + D.Menu / Top Menu
 3	 3

Originale	Sostituto
 Home Menu	 Menu / Home
 4	 4
 System Setup	 Setup / OPT /
 5	 5
 Test Tone	 Text / Goto
 6	 6
 CH Level	 Shift + Smart / List
 7	 7
 Dimmer	 Shift + Mute / Dimmer
 8	 8
 Quiet/Midnight	 Shift + Sleep / Timer
 9	 9
 Timer/Clock	 Sleep / Timer
 CLR	 Exit / Cancel / Clear
 0	 0
 Folder-	 CH- / Page-
 Folder+	 CH+ / Page+





Originale		Sostituto	
	Room Setup	 + 	Shift + Setup / OPT / Tools

