




 











 

 












 
 




Originale	Sostituto
 Power	 Power
 Power Tv	 Shift + Power
 Input Tv	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Dual
 Subtitle	 Subt

Originale	Sostituto
 ♥	 Pre Ch
 Theatre	 Media
 Top Menu	 Menu
 Pop Up Menu	 Guide
 Return	 Back
 Options	 Options
 Eject	 Eject
 Home	 Smart
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Display	 Info



