













 
























Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P+	 CH+ / Page+
 Tv/DTV	 TV/Radio /	 Vol-	 Vol-
 Source	 AV / Input / RDS	 P-	 CH- / Page-
 1	 1	 Guide	 Guide / EPG / -/--
 2	 2	 Menu	 Menu / Home
 3	 3	 W.Link	 Display / Media
 4	 4	 Tools	 Setup / OPT /
 5	 5	 Return	 Back / Return
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 OK
 9	 9	 Right	 Right
 -/--	 Shift + Guide / EPG / -/--	 Info	 Info / Angle
 0	 0	 Down	 Down
 PRE-CH	 Fav / Marker / PC	 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 Mute	 Mute / Dimmer	 Green	 Green / APP / Repeat

Originale	Sostituto	Originale	Sostituto
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 STEP-FREEZE	 SAT	 AUX
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 PICTURE	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 OK	 RETURN	CLEAR	EXIT
EXIT	CANCEL	LIST	SMART
VOL+	MEDIA	DISPLAY	CH PAGE
TV	DVD	CD - STB	1
VIDEO	TAPE	TUNER	2
AUX - HDD	USB	BLUETOOTH	3
7	8	9	4
GUIDE EPG	HDMI - BAT	PC	5
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM





Originale		Sostituto	
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TTX/MIX		Text / Goto
	P.Size		Zoom / Size
	DMA		D.Menu / Top
	E.Mode		Picture / Format
	CH.List		Smart / List
	SUBT.		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originale		Sostituto	

