



 








Originale	Sostituto
 Source	 AV / Input / RDS
 Power Tv	 Power
 [+]	 Shift + OK
 3D	 Zoom / Size
 Theatre	 Shift + Smart / List
 <</<I	 << / Tune-
 Play	 Play / Slow
 >>/I>	 >> / Tune+
 Sync Menu	 Shift + D.Menu / Top Menu
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 ?/i-Manual	 Shift + Setup / OPT / Tools
 Scene	 Picture / Format
 BD/DVD Top	 Shift + Menu /
 BD/DVD Menu	 D.Menu / Top
 Digital/Analog	 Shift + Display / Media

Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Internet Widgets	 Display / Media
 Internet Video	 Smart / List
 ♥/FAV	 Fav / Marker / PC
 Guide	 Guide / EPG / -/-
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 OK	 OK
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat






 


Originale		Sostituto	
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡]/Text		Text / Goto
	0		0
	[...]		Subtitle / EQ
	Vol+		Vol+
	Prog+		CH+ / Page+
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II

Originale		Sostituto	
	Vol-		Vol-
	Prog-		CH- / Page-





 

 









 









 

 

 

 





Originale	Sostituto
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
  <<	  << / Preset-
 Stop	 Stop / Hold
 >>	 >>  / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Home	 Shift + Menu /
 1	 1

Originale	Sostituto
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [...]	 Subtitle / EQ
 Prog+	 CH+ / Page+
 Audio	 Audio / Lang I/II
 Prog-	 CH- / Page-





Originale	Sostituto
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>	 >>  / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 OK	 OK
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /

Originale	Sostituto
 Home	 Shift + Menu /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [≡]/Text	 Text / Goto
 0	 0
 [...]	 Subtitle / EQ

 

 



 









 





 















 















 









 







	Originale	Sostituto	Originale	Sostituto
AUDIO	Audio	LANG I/II AUDIO		





Originale	Sostituto	Originale	Sostituto
	Source		AV / Input / RDS
	Power		Power
	<</<I		<< / Tune-
	Play		Play / Slow
	>>/I>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	Right		Right
	[i+]/Info		Info / Angle
	Up		Up
	OK		OK
	Left		Left
	Return		Back / Return
	Down		Down
	Home		Shift + Menu /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡]/Text		Text / Goto
	0		0
	[...]		Subtitle / EQ
	Vol+		Vol+
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Vol-		Vol-

