 

 

 
 
 
 
 
 

 








 


 
 
 

 
 
 




 


 


 
 

 





 

 
 

 


 


 






Originale	Sostituto
 Power	 Power
 Eco	 Shift + 3D
 Audio	 Dual
 On Timer	 Text
 Caption	 Subt
 Reset	 3D
 Sleep	 Sleep
 Picture	 Format
 Sound	 Shift + Dual
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<
 >>	 >>
 W	 Red
 T	 Green
 Camera	 Yellow

Originale	Sostituto
 Xacti Menu	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --/Sub CH	 Guide
 Input	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +





Originale		Sostituto		Originale		Sostituto	
	CH-		Ch -				
	Recall		Pre Ch				
	DYN Vol		Smart				
	USB		Media				
	Pix Shape		Options				
	Menu		Menu				
	Help		D. Menu				
	Info		Info				
	Exit		Exit				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				

