 

 



 
 
 

 
 





 

 



 

 

 

 

 






 



 
 




 


 





Originale	Sostituto
 Power	 Power
 Mute	 Mute
 DVD Setup	 Media
 Title	 List
 Menu (Blue)	 D. Menu
 USB/CR	 3D
 Nicam/A2	 Shift + Options
 Sleep	 Sleep
 Aspect	 Format
 Eject	 Eject
 Display	 Shift + Info
 Auto	 Back
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 DTV	 Smart
 Source	 AV
 Menu	 Menu

Originale	Sostituto
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide





Originale	Sostituto
	 Guide
	 Pre Ch
	 Ch +
	 Ch -
	 Info
	 Shift + Pre Ch
	 TV/R
	 Dual
	 Vol +
	 Vol -
	 Text
	 Play
	 Pause
	 Stop
	 Rec
	 <<
	 >>

Originale	Sostituto
 I<</Reveal	 I<<
 >>I/Sbpage	 >>I
 Subtitle (Green)	 Subt
 Zoom	 Shift + Eject
 Goto	 Options
 Subtitle (Blue)	 Shift + Subt
 Angle	 Shift + TV/R
 Red/Program	 Red
 Green/Intro	 Green
 Yellow/Repeat	 Yellow
 Blue/A-B	 Blue

