


 



 

 
 

 




 

 

 

 

 

 
 
 

 



 







	Originale	Sostituto	Originale	Sostituto
	Power			Sleep/Timer
	Mute			Up
	Tuner			Down
	DVD			>>
	USB			<<
	iPod			Enter
	P-EQ			Right
	OSD/DIM			Left
	Mode			>>
	Program			<<
	Title			Play
	Subtitle			Pause
	Zoom			Stop
	Audio			Goto
	Setup			1
	Menu			2
	Clock			3





Originale		Sostituto		Originale		Sostituto	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				

