



 

 







 



 

 

 



 



 

 






 
 






 

 

 


 



 
 




Originale	Sostituto
 Power	 Power
 I<<	 I<< / Preset-
 Eject	 Eject / Surround
 <<	 << / Tune-
 >>	 >> / Tune+
 >>	 >> / Preset+
 Play/Pause	 Play / Slow
 TV/TXT /	 Text / Goto
 TV/TXT /	 Audio / Lang I/II
 Cancel / Zoom	 Shift + Exit / Cancel / Clear
 Cancel / Zoom	 Shift + Zoom / Zoom /
 Reveal / Subtitle	 Shift + Subtitle / EQ
 Stop	 Stop / Hold
 Hold / Menu	 D.Menu / Top
 Hold / Menu	 Shift + Stop /
 Size / Angle	 Shift + Info / Angle
 Subpage / Title	 Shift + Sound / Title

Originale	Sostituto
 Index / Goto	 Shift + Text /
 Red/Program	 Red / Netflix / Search
 Red/Program	 TV/Radio /
 Green/Slow	 Green / APP / Repeat
 Green/Slow	 Shift + Play /
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Yellow/Repeat	 Shift + Green / APP /
 Blue/A-B	 Blue / Prime Video / Random
 Blue/A-B	 Shift + Yellow / YouTube /
 CH+	 CH+ / Page+
 TV Menu	 Menu / Home
 Vol+	 Vol+
 CH-	 CH- / Page-
 Source	 AV / Input / RDS
 Vol-	 Vol-
 DTV	 Shift + 1
 DVD Setup	 Setup / OPT /





Originale		Sostituto		Originale		Sostituto	
	Up		Up		0		0
	Left		Left		Recall		Back / Return
	OK		OK		Picture		Picture / Format
	Right		Right		Sound		Sound / Title
	Down		Down		I/II		Shift + Audio / Lang I/II
	Exit		Exit / Cancel / Clear		Mute		Mute / Dimmer
	Display		Display / Media		Sleep		Sleep / Timer
	1		1		Info		Info / Angle
	2		2		Zoom		Zoom / Size
	3		3		Freeze		Pause / Step / Freeze
	4		4		EPG		Guide / EPG / -/--
	5		5		FAV List		Smart / List
	6		6		FAV ADD		Fav / Marker / PC
	7		7		FAV >>I		Shift + Right
	8		8		Subtitle		Subtitle / EQ
	9		9		Time		Shift + Sleep / Timer
	-/--		Shift + Guide / EPG / -/--		Quick Start		Shift + Smart / List

