


 

 



 







 


 

 
 

 

 

 

 
 
 



 


Originale	Sostituto
 Power	 Power
 Tv/Radio	 TV/R
 Q.Menu/Subtitle	 D. Menu
 Guide	 Guide
 AD	 Subt
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List

Originale	Sostituto
 Q.View	 Format
 Vol+	 Vol +
 Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 Fav	 Pre Ch
 Info	 Info
 Mute	 Mute
 Smart	 Smart
 My Apps	 Media
 Settings	 Shift + Options
 Text	 Text
 T.Opt	 Options
 Back	 Back
 Exit	 Exit
 OK	 Ok
 Up	 Up





Originale	Sostituto
 Down	 Down
 Right	 Right
 Left	 Left
 APP/*	 +  Shift + Media
 REC/*	 Rec
 Stop/Live Tv	 Stop
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Originale	Sostituto

