 















 



 


 



 

 










 
 
 






 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 CH+	 Ch +
 8	 8	 CH-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 FAV	 Pre Ch	 Red	 Red
 Recall	 Back	 Green	 Green
 Game	 Media	 Yellow	 Yellow
 Auto	 Smart	 Blue	 Blue
 Info	 Info	 Zoom	 Eject

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 GUIDE	
 PAUSE	 STOP	 EXIT	
 SKIP BACKWARD	 SKIP FORWARD	 OK	
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 UP	 AV
 TOP MENU	 DISPLAY INFO	 OK	
 MENU	 RETURN BACK	 EXIT	
 VOL+	 HOME SMART	 CH+	
 VOL-	 APP MEDIA	 CH-	
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 GUIDE	 0	 FAV	
 A	 B	 C	 D
			
<a href="http://www.mandis.tv">www.mandis.tv</a>			





Originale	Sostituto	Originale	Sostituto
 Lan/Audio	 Dual		
 Play	 Play		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 Text	 Text		
 Tv/Radio	 TV/R		
 Subtitle	 Subt		

Originale	Sostituto

