 



 

 
 
 



 



 
 




 
 


 
 
 


 
 



 
 


 
 


 



 

 

 

 






 






Originale	Sostituto	Originale	Sostituto
 Power	 Power	 <<	 <<
 Eject	 Eject	 Play	 Play
 Tv/VCR	 TV/R	 >>	 >>
 AV	 AV	 Pause/Still	 Pause
 CM Skip	 Options	 Stop	 Stop
 ez Power Off	 Smart	 LP	 Media
 ez Repeat	 Text	 C.Lock	 Back
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 i	 Info
 6	 6	 OK/CLK/CNT	 Ok
 7	 7	 Clear	 Exit
 8	 8	 Rec/OTR	 Rec
 9	 9		
 0	 0		

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 TV	 TV
 DVD	 DVD	 SAT	 SAT
 AUX	AUX	 PLAY MODE	 PLAY MODE
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 PLAY	 PLAY	 STOP	 STOP
 PAUSE	 PAUSE	 STOP	 STOP
 STOP	 STOP	 STOP	 STOP
 STOP	 STOP	 STOP	 STOP
 STOP	 STOP	 STOP	 STOP
 STOP	 STOP	 STOP	 STOP
 STOP	 STOP	 STOP	 STOP
 STOP	 STOP	 STOP	 STOP
 STOP	 STOP	 STOP	 STOP
 STOP	 STOP	 STOP	 STOP
 STOP	 STOP	 STOP	 STOP

