



Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Display	 Shift + Info
 TV	 TV/R
 PC	 Smart
 Scart	 AV
 Video/S-V	 Media
 Component	 Options
 Sound	 Dual
 Exit	 Exit
 APC	 Guide
 ARC	 Shift + Pre Ch
 Reset	 Back
 Sleep	 Sleep
 Teletext	 Text
 Up	 Up
 P+	 Ch +

Originale	Sostituto
 P-	 Ch -
 Down	 Down
 Right	 Right
 Vol+	 Vol +
 Left	 Left
 Vol-	 Vol -
 Enter	 Ok
 Menu	 Menu
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [≡i]	 Info
 1	 1
 [+]	 Shift + Options
 2	 2
 [≡x]	 Shift + TV/R





Originale	Sostituto
3	3
[≐?]	DISC NAV LIST
4	4
[◆]	SHIFT + ECO 3D
5	5
POSITION	AD SUBT
6	6
SIZE	PICTURE FORMAT
7	7
[O]	SHIFT + AD SUBT
8	8
PIP Source	<<
9	9
PIP Source Up	>>
0	0
On/Off	ECO 3D
+100	SHIFT + /- GUIDE

Originale	Sostituto
RTN	FAV PRE-CH
	Pre Ch

