




 






 








 



 





 






 



















Originale	Sostituto
 Standby	 Power
 DTV/VCR	 AV / Input / RDS
 Mute	 Mute / Dimmer
 Info	 Info / Angle
 Pause	 Pause / Step / Freeze
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Up	 Up
 CH+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Vol+	 Vol+
 Right	 Right
 CH-	 CH- / Page-
 Down	 Down

Originale	Sostituto
 Favorite	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 Game	 Smart / List
 4	 4
 5	 5
 6	 6
 Recall	 Back / Return
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto





Originale		Sostituto		Originale		Sostituto	
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

