



Originale	Sostituto	Originale	Sostituto
Power	Power	Mute	Mute
Tv/AV	AV	Vol+	Vol +
1	1	Vol-	Vol -
2	2	Up	Up
3	3	CH+	Ch +
4	4	CH-	Ch -
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	Sys Menu	Menu
9	9	Display	Shift + Info
0	0	OK	Ok
-/--	Shift + Guide	Picture	Format
Eject	Eject	Sound	Dual
Play/Pause	Play	Timer	Shift + AV
Stop	Stop	Nicam/A2	Media
Return	Back	Lan/Prog-	Shift + Ch -

Originale	Sostituto	Originale	Sostituto
Mute	Mute	Vol+	Vol +
Vol+	Vol +	Vol-	Vol -
Vol-	Vol -	Up	Up
Up	Up	CH+	Ch +
CH+	Ch +	CH-	Ch -
CH-	Ch -	Down	Down
Down	Down	Right	Right
Right	Right	Left	Left
Left	Left	Sys Menu	Menu
Sys Menu	Menu	Display	Shift + Info
Display	Shift + Info	OK	Ok
OK	Ok	Picture	Format
Picture	Format	Sound	Dual
Sound	Dual	Timer	Shift + AV
Timer	Shift + AV	Nicam/A2	Media
Nicam/A2	Media	Lan/Prog-	Shift + Ch -
Lan/Prog-	Shift + Ch -		





Originale	Sostituto		
PROG+ ZOOM	Zoom/Prog+	SHIFT + CH	Shift + Ch +
SUB	Sub	AD SUBT	Subt
GOTO	Goto	SETTINGS OPT	Options
TV/TXT DVB-MENU SET	SET/Tv/TXT/DVB-	REPEAT TEXT	Text
REVEAL EXIT ANG	ANG/Reveal/Exit	CLEAR EXIT	Exit
CANCEL TV FORMAT MENU	Menu/Cancel/Tv Format	E-MANUAL D.MENU	D. Menu
INFO TITLE	Title/info	DISPLAY INFO	Info
HOLD LANGUAGE	<</Hold/Languag	<<	<<
SIZE TEXT	>>/Size/Text	>>	>>
SUBPAGE FAV	I<</Subpage	I<<	I<<
SUBPAGE FAV	FAV	FAV PRE-CH	Pre Ch
INDEX EPG	>>I/Index	>>I	>>I
INDEX EPG	EPG	-/-- GUIDE	Guide
TV/RADIO	Red/Pro	A	Red
TV/RADIO	Tv/Radio	SEARCH TV/R	TV/R
AUDIO	Green/Slow/Audio	B	Green
FREEZE	Yellow/Rep/Freeze	C	Yellow

Originale	Sostituto		
SUBTITLE A-B	Blue/A-B/Subtitle	D	Blue

