





Originale	Sostituto
 Power	 Power
 Power Tv	 Shift + Power
 Eject/Open-Close	 Eject / Surround
 AV Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/TRK+	 Shift + CH+ /
 PR+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/TRK-	 Shift + CH- /
 PR- Tv	 CH- / Page-
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 Vol+ Tv	 Vol+
 Tv/VCR	 TV/Radio /
 0	 0
 AV	 AV / Input / RDS
 Vol- Tv	 Vol-
 <</Backward	 << / Tune-
 >>/Forward	 >> / Tune+
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Display/CLK/CN	 Display / Media
 Up	 Up
 i/Setup	 Info / Angle
 Left	 Left
 OK/Enter	 OK





Originale	Sostituto
 Right	 Right
 Disc Menu	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 Audio	 Audio / Lang I/II
 [...] / Subtitle	 Subtitle / EQ
 Camera / Angle	 Shift + Info / Angle
 Zoom	 Zoom / Size
 Rec / ITR	 Rec / Rec Mode
 Lock	 Shift + Exit / Cancel / Clear
 Title	 Sound / Title
 Program	 Shift + TV / Radio / Program
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 A-B / LP	 Yellow / YouTube / Repeat

Originale	Sostituto
 Random / CM	 Smart / List





Originale	Sostituto
 Power	 Power
 Power Tv	 Shift + Power
 Eject/Open-Close	 Eject / Surround
 AV Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/TRK+	 Shift + CH+ /
 PR+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/TRK-	 Shift + CH- /
 PR- Tv	 CH- / Page-
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 Vol+ Tv	 Vol+
 Tv7VCR	 TV/Radio /
 0	 0
 AV	 AV / Input / RDS
 Vol- Tv	 Vol-
 <</Backward	 << / Tune-
 >>/Forward	 >> / Tune+
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Display/CLK/CN	 Display / Media
 Up	 Up
 i/Setup	 Info / Angle
 Left	 Left
 K/Enter	 OK





Originale	Sostituto
	Right
	Disc Menu / D.Menu / Top
	Down
	Return / Back / Return
	Audio / Lang I/II
	[...] / Subtitle / Subtitle / EQ
	Camera / Angle / Shift + Info / Angle
	Zoom / Size
	Rec / Rec Mode
	Lock / Shift + Exit / Cancel / Clear
	Title / Sound / Title
	Program / Shift + TV / Radio / Program
	Marker / Fav / Marker / PC
	Search / Red / Netflix / Search
	Clear / Exit / Cancel / Clear
	Repeat / Green / APP / Repeat
	A-B / LP / Repeat / Yellow / YouTube / Repeat

Originale	Sostituto
	Random / CM / Smart / List

