



 



 























 





Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 Teletext	 Text / Goto
 [!2]	 Setup / OPT /
 Subtitle	 Subtitle / EQ
 Format	 Picture / Format
 Green	 Green / APP / Repeat
 Red/Demo	 Red / Netflix / Search
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/--
 Info	 Info / Angle
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Ok	 OK

Originale	Sostituto
 Back	 Back / Return
 Menu	 Menu / Home
 Vol+	 Vol+
 Vol-	 Vol-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale

Sostituto

MHEG CANCEL	MHEG Cancel	CLEAR EXIT CANCEL	Exit / Cancel / Clear
P↔P	P↔←P	PC FAV MARKER	Fav / Marker / PC

Originale

Sostituto

