 



 





 



 

 
 

 



 








Originale	Sostituto	Originale	Sostituto
	Power		Power
	[?]		Format
	Tv/Radio		TV/R
	Guide		Guide
	Info		Info
	[]/Ratio		3D
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originale	Sostituto	Originale	Sostituto
	List		List
	Q.View		D. Menu
	Settings		Options
	Q.Menu		Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	FAV		Pre Ch
	PIP/AD		Shift + Subt
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +





Originale	Sostituto	Originale	Sostituto
PR-	Ch -		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Subtitle	Subt		
Text	Text		
T.Opt	Shift + Options		
Stop	Stop		
Play	Play		
Pause	Pause		
<<	<<		
>>	>>		

Originale	Sostituto

