



Originale	Sostituto
Standby	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/-	+ Shift + Guide / EPG / -/-
Recall	Back / Return
Vol+	Vol+
I/II/Audio	Audio / Lang I/II
Auto	Smart / List

Originale	Sostituto
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-
Up	Up
Left	Left
OK/Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Source	AV / Input / RDS
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Play/Pause / Size	Zoom / Size
Play/Pause / Size	Play / Slow





Originale	Sostituto
SIZE Play/Pause / Size	STEP-FREEZE Pause / Step / Freeze
HOLD Stop/Hold	HOLD Stop / Hold
TEXT Text	GOTO TEXT Text / Goto
SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ
INDEX <</Index	TUNE- << / Tune-
REVEAL >>/Reveal	TUNE+ >> / Tune+
SUBPAGE <</Subpage	PRESET- << / Preset-
FAV >> /FAV	PRESET+ >> / Preset+
FAV >> /FAV	PC FAV MARKER Fav / Marker / PC
MEDIA Media	SHIFT + MEDIA DISPLAY Shift + Display / Media
REC Rec	REC MODE Rec / Rec Mode
EPG EPG	GUIDE EPG Guide / EPG / -/--
TVRADIO Tv/Radio	PROGRAM TV/RADIO TV/Radio /
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random

Originale	Sostituto

