


 
 




 
 

 

 


 
 








 


 

 






Originale	Sostituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Display
	Recall
	Setup
	EPG
	Source

 

 

 
 
 
 
 
 
 
 
 
 
Originale	Sostituto
	CH.List
	Exit/Cancel
	FAV
	Up
	Down
	Right
	Left
	OK
	CH+/Page+
	CH-/Page-
	S.Mode
	P.Mode
	Vol+
	Vol-
	Record
	Record List
	Audio

	List
	Exit
	Shift + Pre Ch
	Up
	Down
	Right
	Left
	Ok
	Ch +
	Ch -
	Shift + Dual
	Format
	Vol +
	Vol -
	Rec
	Smart
	Dual





Originale	Sostituto
 S.TITLE	 Subt
 REVEAL	 Menu
 INDEX	 3D
 MIX	 Shift + Subt
 TEXT	 Text
 REVEAL	 Play
 REVEAL	 Pause
 INDEX	 Stop
 MIX	 <<
 TEXT	 >>
 MIX	 I<<
 TEXT	 >>I
 Red/Goto	 Red
 Green/A-B	 Green
 Yellow/Repeat	 Yellow
 Blue/Angle	 Blue
 S. Page/DVD	 D. Menu

Originale	Sostituto
 Hold/Title	 Back
 Zoom-	 Shift + Down
 Size/Zoom+	 Shift + Up
 Eject	 Eject
 Sleep	 Sleep
 Scaler	 Media
 Tv/Radio	 TV/R



Menu