 



 
 

 
 

 
 
 
 
 
 
 

 
 
 


 
 
 

 
 

 
 
 
 
 

 

 
 
 



 


 
 

 
 
 






 
 


 



 




Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Zoom	 Shift + Eject
 Open/Close	 Eject	 OO/Audio	 Dual
 Input Select	 AV	 Search	 TV/R
 1	 1	 Repeat	 Text
 2	 2	 Top Menu	 Menu
 3	 3	 Disc Menu	 D. Menu
 4	 4	 Enter	 Ok
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 Return	 Back
 0	 0	 Display	 Info
 Prog+	 Ch +	 Instant Skip	 Guide
 Prog-	 Ch -	 1.3x/0.8x Play	 Subt
 Clear	 Exit	 Time Slip	 Sleep
 Mode	 Format	 Play	 Play





Originale	Sostituto	Originale	Sostituto
Stop	Stop		
Pause	Pause		
<<	<<		
>>	>>		
>>	>>		
<<	<<		
Rec	Rec		
DVD	Green		
VCR	Red		
Dubbing	Blue		
Sat Link	Media		
Timer Set	3D		
Timer Prog.	List		
Rec Mode	Shift + Rec		
Setup	Options		

